

## VRM 19" CABINETS MODBOX III VRM

### 1.0 SCOPE

This is Installation Instruction for 19" Vertical Rack Manager System that can be installed in MODBOX III VRM Cabinets offered in EE region.

### 2.0 PRODUCT DESCRIPTION

19" Vertical Rack Manager offered in EE region.

| Part number  | Description   |
|--------------|---|
| RAA-00322-08 | Vertical Rack Manager for Modbox III VRM 42U Standing Cabinet (1pcs with mounting screws), Graphite |
| RAA-00322-04 | Vertical Rack Manager for Modbox III VRM 42U Standing Cabinet (1pcs with mounting screws), Black    |
| RAA-00324-08 | Front Door for Modbox III VRM 42U Standing Cabinet (1pcs), Graphite                                 |
| RAA-00324-04 | Front Door for Modbox III VRM 42U Standing Cabinet (1pcs), Black                                    |
| CMA-00108    | Set of Finger Guides, Locks and mounting screws for 19" VRM Vertical Rack Manager                   |

### 3.0 REFERENCE DOCUMENTS

No reference docs

### 4.0 PROCEDURE

#### 1. List of required tools



|         |           |
|---------|-----------|
| MPN NO. | SAPNO.    |
| 215-401 | 187000388 |

- a) Electric screw driver
- b) Hand screw driver
- c) 8mm hexagon socket wrench for electric screwdriver

|   |   |   |  |
|---|---|---|--|
| REVISION:<br><b>A1</b>                  | ECR/ECN INFORMATION:<br>EC No: <b>MTS2013-0071</b><br>DATE: <b>2013 / 07 / 16</b> | TITLE:<br><b>IS-VRM 19" Cabinets MODBOX III VRM</b> | SHEET No.<br><b>1 of 7</b>               |
| DOCUMENT NUMBER:<br><b>AS-18700-081</b> | CREATED / REVISED BY:<br><b>Snagaravenka</b>                                      | CHECKED BY:<br><b>CG, Raghavan</b>                  | APPROVED BY:<br><b>Ojdana, Krzysztof</b> |

## 2. List accessories required to assemble 19" Vertical Rack Manager, 1 piece




- a) Finger Guide                      8pcs
- b) Finger Guide - half              2pcs
- c) Lock for door                      3pcs
- d) 8mm size screw                  18pcs

## 3. Assembly process of 19" Vertical Rack Manager

3.1) Unpack the 19" Vertical Rack Manager

3.2) Install half of the lock in the support of 19" Vertical Rack Manager. Repeat this action 3 times.

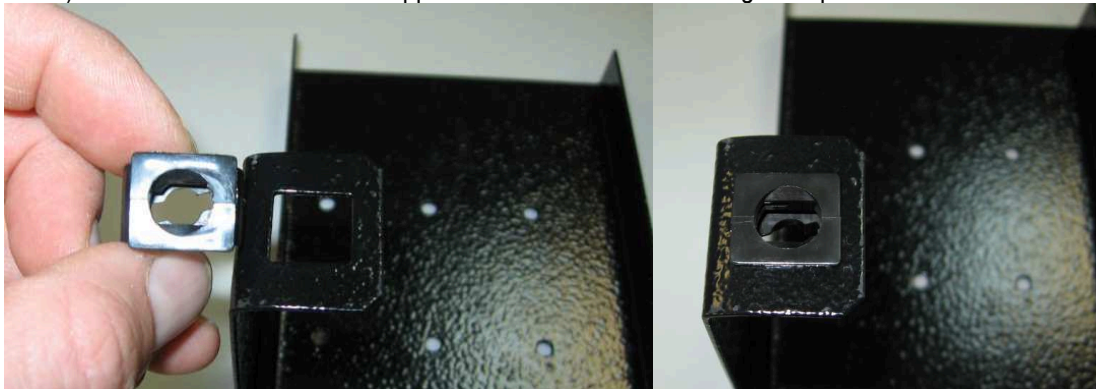

3.3) Install half of the Finger Guide at the top and end of 19" Vertical Rack Manager. Fasten it with a screw delivered in a kit. Use electric screwdriver for quick and comfortable installation.

|         |           |
|---------|-----------|
| MPN NO. | SAPNO.    |
| 215-401 | 187000388 |


|   |   |   |  |
|---|---|---|--|
| REVISION:<br><b>A1</b>                  | ECR/ECN INFORMATION:<br>EC No: <b>MTS2013-0071</b><br>DATE: <b>2013 / 07 / 16</b> | TITLE:<br><b>IS-VRM 19" Cabinets MODBOX III<br/>VRM</b> | SHEET No.<br><b>2 of 7</b>               |
| DOCUMENT NUMBER:<br><b>AS-18700-081</b> | CREATED / REVISED BY:<br><b>Snagaravenka</b>                                      | CHECKED BY:<br><b>CG, Raghavan</b>                      | APPROVED BY:<br><b>Ojdana, Krzysztof</b> |



3.4) Install 8 Finger Guides at the middle of 19" Vertical Rack Manager. Fasten it with a screws delivered in a kit. Use electric screwdriver for quick and comfortable installation.

|         |           |
|---------|-----------|
| MPN NO. | SAPNO.    |
| 215-401 | 187000388 |

|   |   |   |  |
|---|---|---|--|
| REVISION:<br><b>A1</b>                  | ECR/ECN INFORMATION:<br>EC No: <b>MTS2013-0071</b><br>DATE: <b>2013 / 07 / 16</b> | TITLE:<br><b>IS-VRM 19" Cabinets MODBOX III<br/>VRM</b> | SHEET No.<br><b>3 of 7</b>               |
| DOCUMENT NUMBER:<br><b>AS-18700-081</b> | CREATED / REVISED BY:<br><b>Snagaravenka</b>                                      | CHECKED BY:<br><b>CG, Raghavan</b>                      | APPROVED BY:<br><b>Ojdana, Krzysztof</b> |

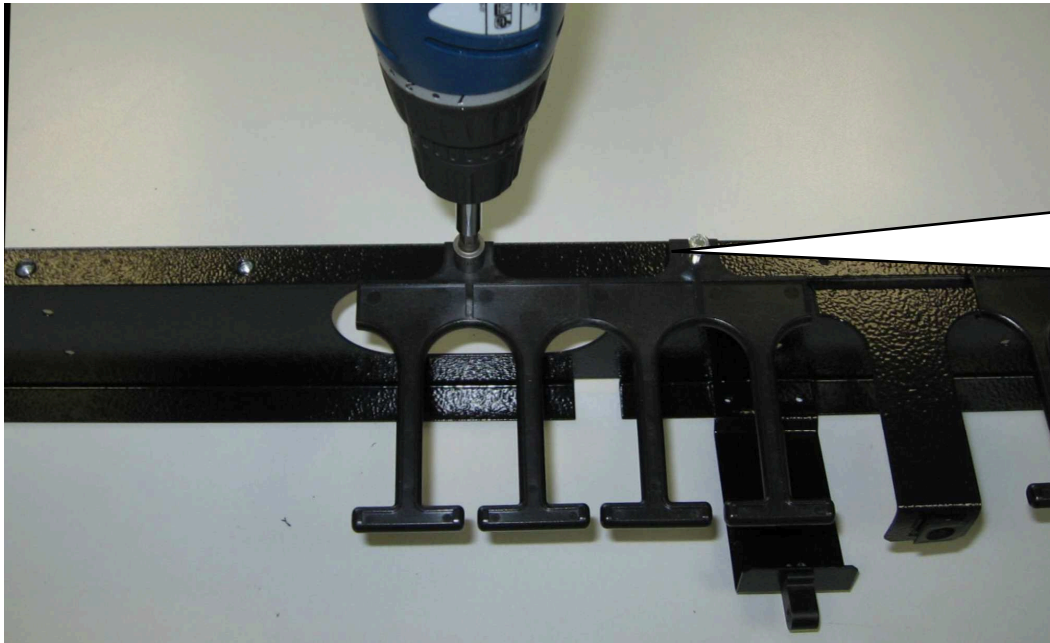


3.5) 19" Vertical Rack Manager is ready for installation in MODBOX III VRM Cabinet




**4. Installation of 19" Vertical Rack Manager in a MODBOX III VRM Cabinet**  
 4.1) Install the 19" Vertical Rack Manager at one side of 19" Rack

|         |           |
|---------|-----------|
| MPN NO. | SAPNO.    |
| 215-401 | 187000388 |

|   |   |   |  |
|---|---|---|--|
| REVISION:<br><b>A1</b>                  | ECR/ECN INFORMATION:<br>EC No: <b>MTS2013-0071</b><br>DATE: <b>2013 / 07 / 16</b> | TITLE:<br><b>IS-VRM 19" Cabinets MODBOX III VRM</b> | SHEET No.<br><b>4 of 7</b>               |
| DOCUMENT NUMBER:<br><b>AS-18700-081</b> | CREATED / REVISED BY:<br><b>Snagaravenka</b>                                      | CHECKED BY:<br><b>CG, Raghavan</b>                  | APPROVED BY:<br><b>Ojdana, Krzysztof</b> |

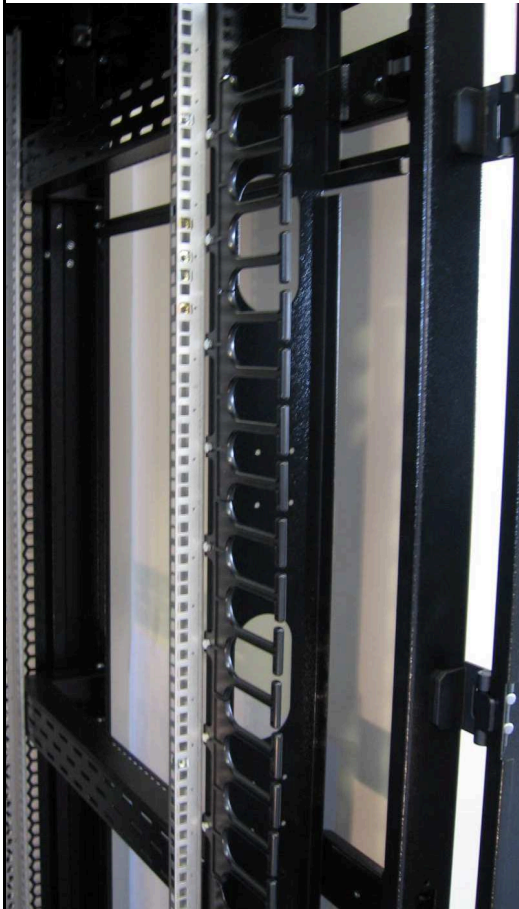

4.2) Fasten the 19" Vertical Rack Manager to a Cabinet using 6 Philips type screw

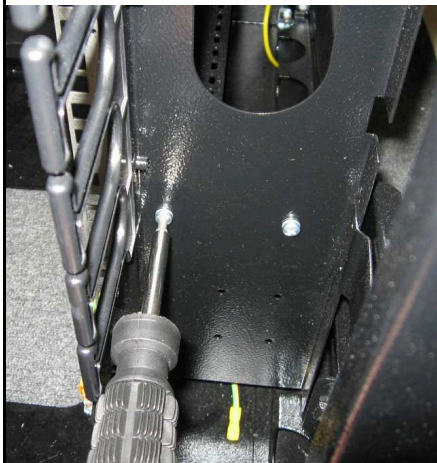

|         |           |
|---------|-----------|
| MPN NO. | SAPNO.    |
| 215-401 | 187000388 |

|   |   |   |  |
|---|---|---|--|
| REVISION:<br><b>A1</b>                  | ECR/ECN INFORMATION:<br>EC No: <b>MTS2013-0071</b><br>DATE: <b>2013 / 07 / 16</b> | TITLE:<br><b>IS-VRM 19" Cabinets MODBOX III<br/>VRM</b> | SHEET No.<br><b>5 of 7</b>               |
| DOCUMENT NUMBER:<br><b>AS-18700-081</b> | CREATED / REVISED BY:<br><b>Snagaravenka</b>                                      | CHECKED BY:<br><b>CG, Raghavan</b>                      | APPROVED BY:<br><b>Ojdana, Krzysztof</b> |

## 5. Installation of Front Door in 19" Vertical Rack Manager


5.1) Install knobs in the Front Door for 19" Vertical Rack Manager that are a part of the locks. Repeat this action three times.



5.2) Install hinges




5.3) Install the Front Door into the 19" Vertical Rack Manager. Secure two hinges with a metal knobs.

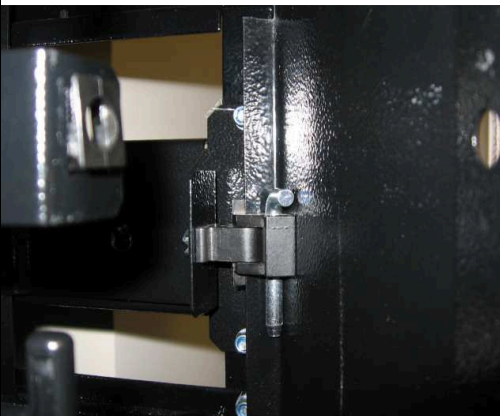

|         |           |
|---------|-----------|
| MPN NO. | SAPNO.    |
| 215-401 | 187000388 |

|   |   |   |  |
|---|---|---|--|
| REVISION:<br><b>A1</b>                  | ECR/ECN INFORMATION:<br>EC No: <b>MTS2013-0071</b><br>DATE: <b>2013 / 07 / 16</b> | TITLE:<br><b>IS-VRM 19" Cabinets MODBOX III<br/>VRM</b> | SHEET No.<br><b>6 of 7</b>               |
| DOCUMENT NUMBER:<br><b>AS-18700-081</b> | CREATED / REVISED BY:<br><b>Snagaravenka</b>                                      | CHECKED BY:<br><b>CG, Raghavan</b>                      | APPROVED BY:<br><b>Ojdana, Krzysztof</b> |

5.4) Installation of one piece of 19" Vertical Rack Manager is complete. Repeat all steps for second piece of the 19" Vertical Rack Manager to complete the job.

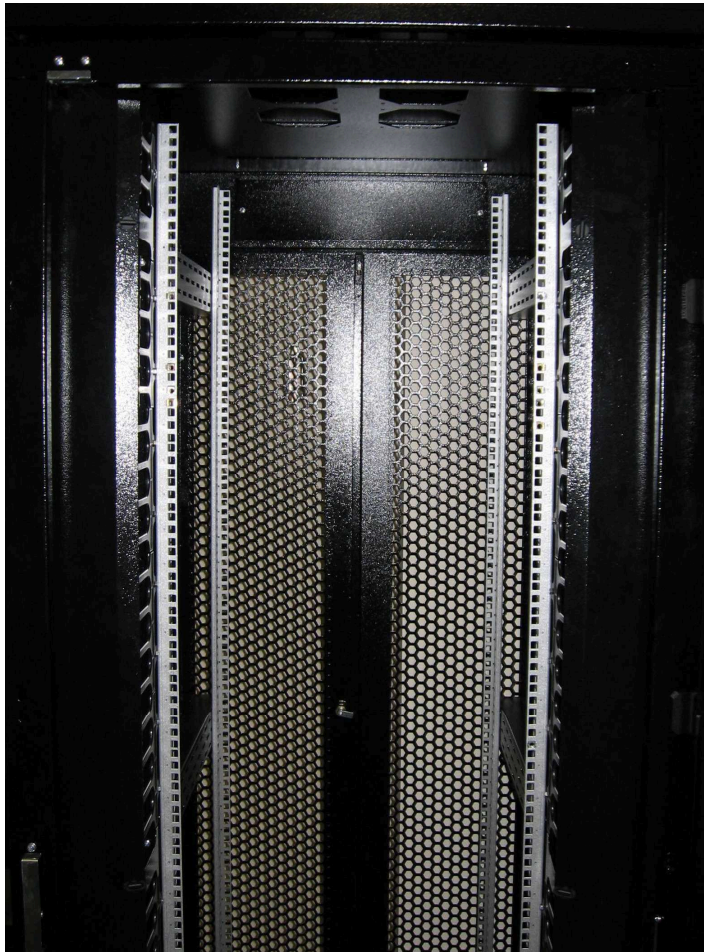

|         |           |
|---------|-----------|
| MPN NO. | SAPNO.    |
| 215-401 | 187000388 |

|   |   |   |  |
|---|---|---|--|
| REVISION:<br><b>A1</b>                  | ECR/ECN INFORMATION:<br>EC No: <b>MTS2013-0071</b><br>DATE: <b>2013 / 07 / 16</b> | TITLE:<br><b>IS-VRM 19" Cabinets MODBOX III<br/>VRM</b> | SHEET No.<br><b>7 of 7</b>               |
| DOCUMENT NUMBER:<br><b>AS-18700-081</b> | CREATED / REVISED BY:<br><b>Snagaravenka</b>                                      | CHECKED BY:<br><b>CG, Raghavan</b>                      | APPROVED BY:<br><b>Ojdana, Krzysztof</b> |