




## POWER CAT 1U HIGH DENSITY PATCH PANEL EUROPEAN INSTALLATION

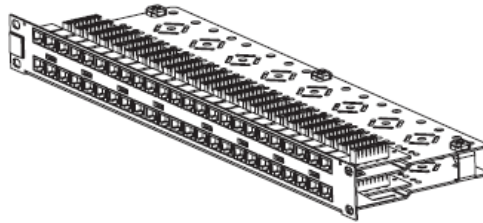

### 1.0 SCOPE

This document provides installation instructions of Power Cat 1U High Density Patch Panel for European

### 2.0 PROCEDURE



#### 2.1 ASSEMBLY INSTRUCTIONS

Tools required.


110 TERMINATION TOOL SET ON LOW IMPACT.



#### 1. Preparation


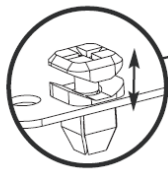
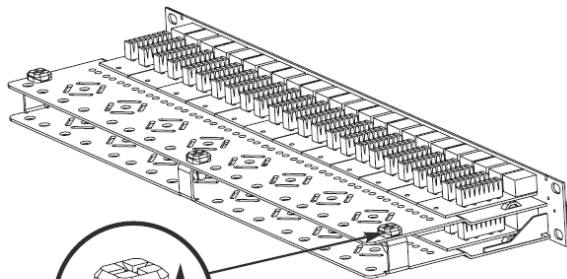


Release snap-fit fasteners

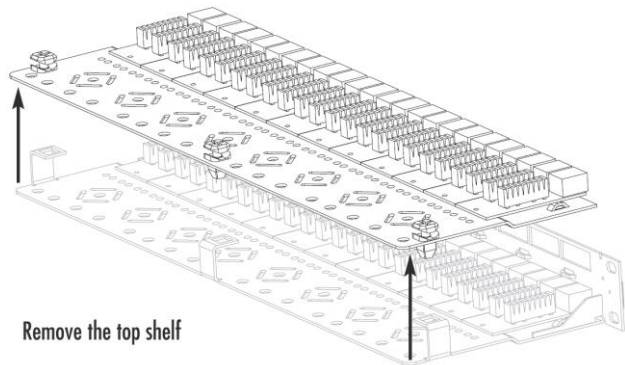

Remove the top shelf

#### 2. Termination

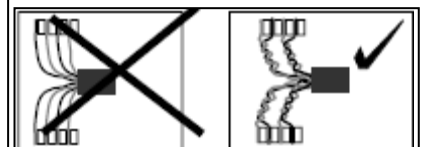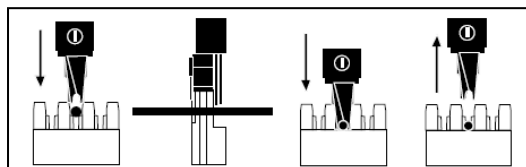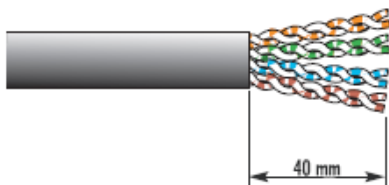


#### 3. Color Coding

EC/ECM NO: <b>115310</b>	SAP NO : <b>187000389</b>	Doc No: <b>AS-18700-083</b> Doc part: <b>AS</b>	REV- <b>A2</b>
SAP EC NO: <b>10832335</b>	<a href="http://www.molexces.com/">http://www.molexces.com/</a>		DATE: <b>2017/MAY/11</b>


568A

F	D	E	NL	GB	Jack Pin
blanc/bleu	weiß/blau	blanco/azul	wit/blauw	white/blue	5--
bleu	blau	azul	brau	blue	4--
blanc/vert	weiß/grun	blanco/verde	wit/groen	white/green	1--
vert	grun	verde	groen	green	2--
blanc/orange	orange/weiß	blanco/naranje	wit/oranje	white/orange	3--
orange	orange	naranje	oranje	orange	6--
blanc/marron	weiß/braun	blanco/marron	wit/bruin	white/brown	7--
marron	braun	marron	bruin	brown	8--
*	*	*	*	drain wire	Shield

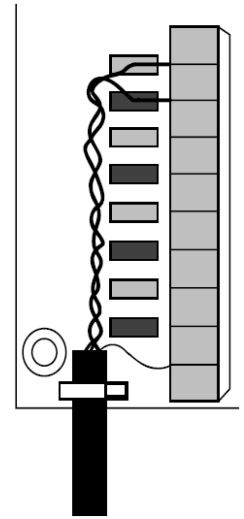


568B

F	D	E	NL	GB	Jack Pin
blanc/bleu	weiß/blau	blanco/azul	wit/blauw	white/blue	5--
bleu	blau	azul	brauw	blue	4--
blanc/orange	weiß/orange	blanco/naranje	wit/oranje	white/orange	1--
orange	orange	naranje	oranje	orange	2--
blanc/vert	weiß/grun	blanco/verde	wit/groen	white/green	3--
vert	grun	verde	groen	green	6--
blanc/marron	weiß/braun	blanco/marron	wit/bruin	white/brown	7--
marron	braun	marron	bruin	brown	8--
*	*	*	*	drain wire	Shield

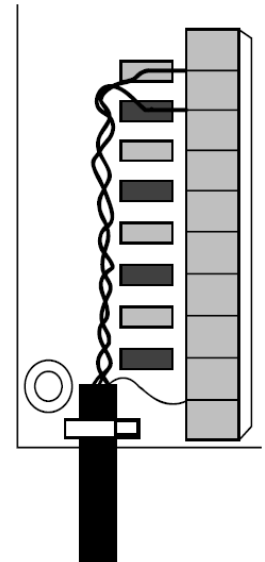

4. Cable Dressing

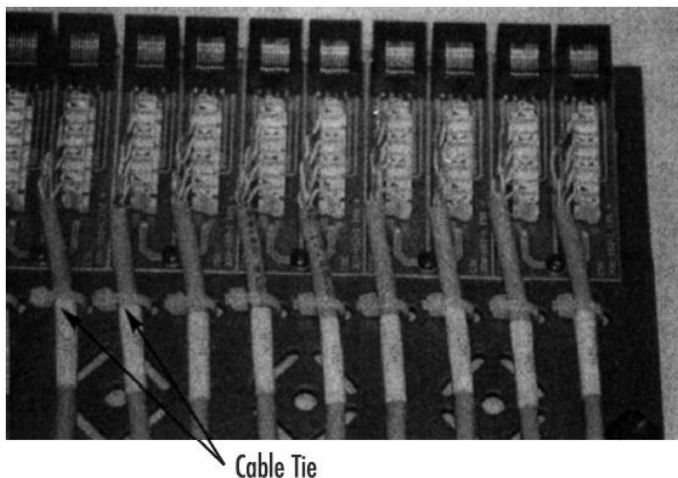




**Dress cable with a service loop to allow for panel inspection or test.**



**Dress cable to the left bottom shelf to the right on the top shelf.**

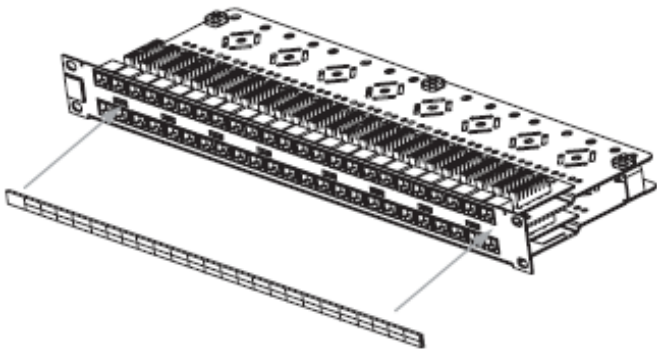

**Attach self-adhesive label**