

### 24 PORT 1U and 48 PORT 2U KEYSTONE JACK PATCH PANEL UNLOADED



#### 1.0 SCOPE

This document describes the installation instructions for the 24 1U and 48 Port 2U Unloaded Keystone Jack Panels.

#### 2.0 PRODUCT DESCRIPTION

The Keystone Jack Patch Panels are 19" unloaded patch panels designed to accommodate 24 or 48 UTP or Shielded Keystone Jacks.

#### 3.0 PROCEDURE

- a) Terminate the Keystone Jacks following the installation instruction sheet supplied with the relevant Keystone Jacks.
- b) Snap the jacks into the into the panel. Tilt the jack into position: locate the small latches at the bottom of the jack and position these at the bottom of the load bar, then position the large latch on the top of the jack facing upward and secure in the load bar. Use slim screwdriver to push latch for mounting and remove jack from the Patch Panel. Fig. 1. Note: Slim screwdriver are not supplied.

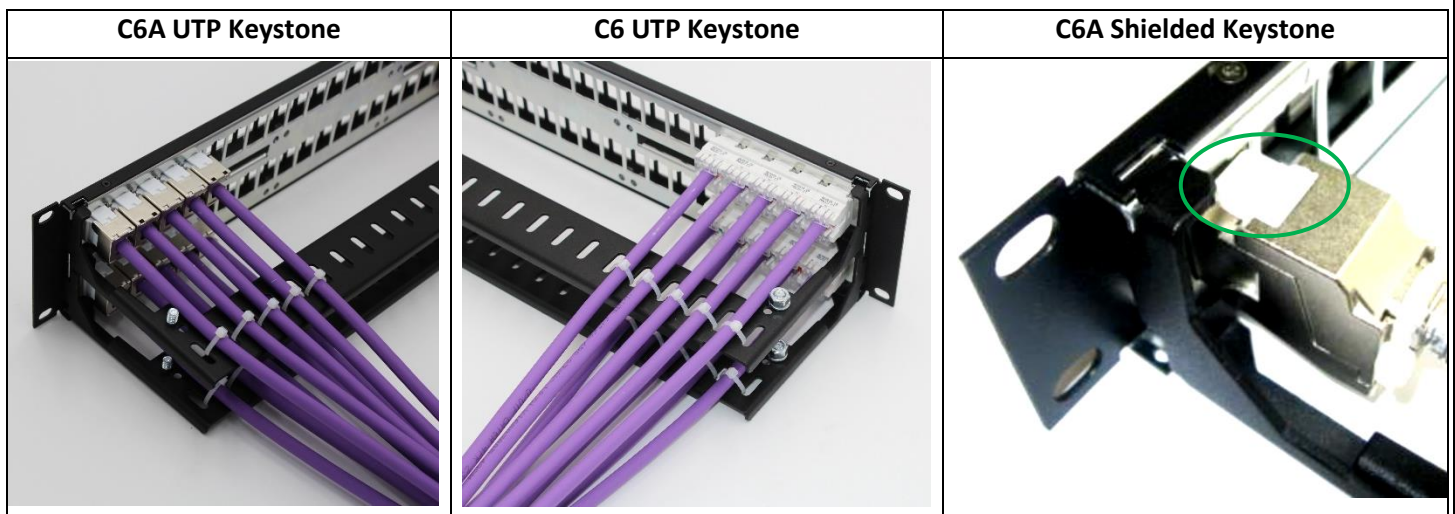


Fig.1

ENGINEERING RECORD NO : <b>720762</b>	SAP NO : <b>187000449</b>	Doc No: <b>AS-18700-143</b>	Doc part: AS	REV- B
<a href="http://www.molexces.com">http://www.molexces.com</a>				

c) Secure each cable on to the cable management tray with a cable tie. Fig 2.

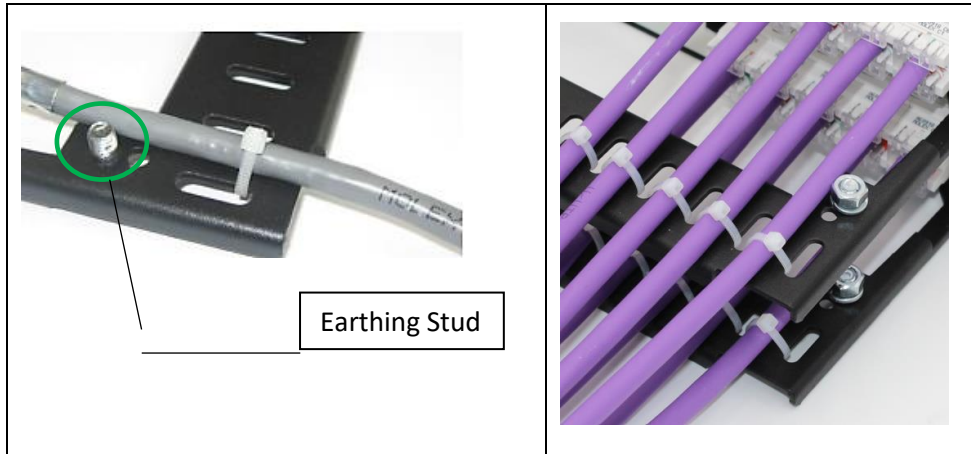


Fig. 2

d) When installing Shielded Keystone Jacks ensure that the panel is earthed using the earthing stud and nut provided. Fig 2 & Fig.3 Note: Earthing cables are not supplied.

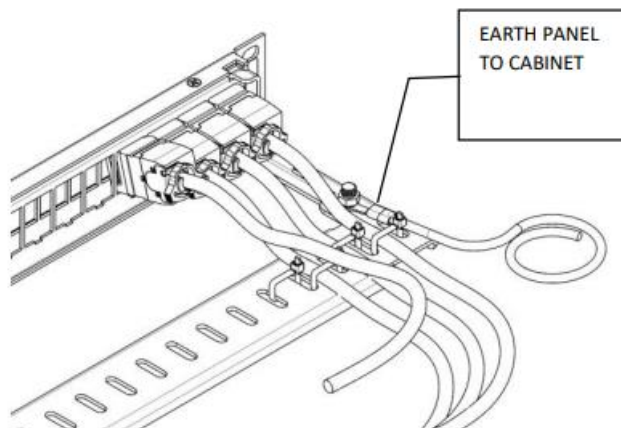


Fig. 3

e) Utilize the panel labelling feature for clear patch panel identification. Slide the paper label into the label holder provided and snap into the label holder. Fig. 4

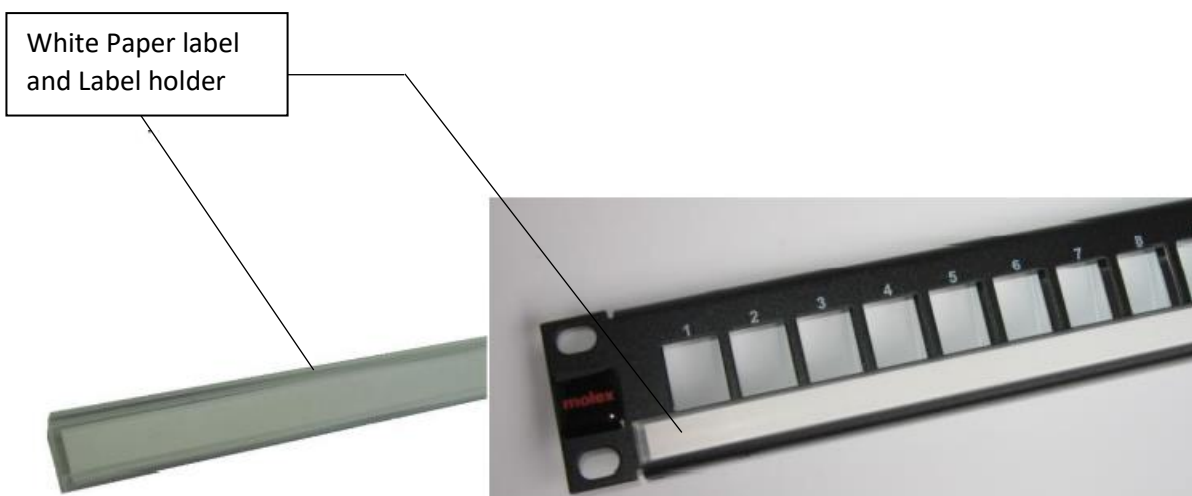


Fig.4